

Aero Design Ltd.**Work Order Control Sheet**Work Order#: 2015-58 Date Opened: 01 Jun 2015 Title: AssemblyAircraft OEM: Eurocopter Aircraft Model: AS350/355 Product Type: Cargo Basket Product Model: XL Ski Quantity: 1**Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
Additional Work Sheets (Standard Practice)
Drawings (See List Below)
Parts Distribution Sheet
Sub Component Tags
Completed Certification
Time Sheet (R&D)
Notes

Initial or N/A

JR
N/A
JR
JR
N/A
JR
N/A
N/A

Build Sheet Contents

Tasks Initialled
Dual Inspections Initialled

Initial or N/A

JR
JR

Drawing List

Drawing #	Rev #	Description	Initial or N/A
94010	1	Basket	JR
94011	1	Body	JR
94012	1	Lid	JR
94027	1	Data Plate	JR

Traveller

Install walkway on lid
Install lid on basket body
Re-tap mounting lug holes and install mount lugs
Install handle brackets
Install handle
Install lid prop
Install data plate

Initial or N/A

JR
JR
JR
JR
JR
JR
JR

Component Completion

Quantity Complete on This Work Order
Quantity Incomplete on This Work Order
Further Processing Required Before Release
Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Certification

Form One Completed
Serviceable (Green) Tag Completed
In Process (Yellow) Tag Completed
Unserviceable (Red) Tag Completed
Parts Placed in Stores for Distribution

Initial or N/A

JR
N/A
N/A
N/A
N/A

Additional Documentation

Documentation of a minor change
Non-Conformance Report Required
Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
Research and Development
Third Party

Initial or N/A

JR
N/A
N/A

Work performed by:

Print: Jason RekveSign: Jason RekveSCA: AD01Date: 01-Jun-15

ICC / Dual Inspection performed by:

Print: Jeff ClarkeSign: Jeff ClarkeSCA: AD01Date: 01-Jun-15


Work Order closed by:

Print: Jason RekveSign: Jason RekveSCA: AD01Date: 01-Jun-15

Approved Manufacturing Facility 73-04

Form 20.D.03

Rev. Original 23 Sep 2014

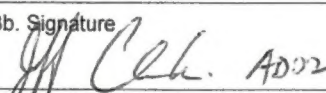1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No.	
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO2015-58	
6. Item	7. Description	8. Part Number	9. Qty.	10. Serial/Batch No.	11. Status/Work	
	Cargo Basket	94010-01	1	94001-45	New	
12. Remarks Modified with walkway on lid IAW DCL704, Black						
13a. Certifies that the items identified above were manufactured in conformity to:				14a. <input type="checkbox"/> CAR 571.10 Maintenance Release		
<input checked="" type="checkbox"/> Approved design data and are in condition for safe operation.				<input type="checkbox"/> Other regulation specified in block 12		
<input type="checkbox"/> Non approved design data specified in block 12.				Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.		
13b. Signature 		13c. Approved Organization Number AMF 73-04		14b. Signature		14c. Approved Organization Number
13d. Name Jeff Clarke – AD02		13e. Date (dd/mmm/yyyy) 01 June 2015		14d. Name		14e. Date (dd/mmm/yyyy)
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>						

CARGO BASKET ASSEMBLY - COMMON

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket
94510, Revision 0 – Extra-Wide Low Mounted Basket
94610, Revision 0 – Extra-Wide Low Mounted Ski Basket
76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket
76410, Revision 3 – Medium Basket (left or right)
78410, Revision 2 – Long Basket
94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket
80310, Revision 0 – Medium Basket
81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket
95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: 2015-58

Date Open: 01 Jun 15

dh

1. Lid Assembly

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

dh

2. Body Assembly

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)



- d. Record PO of hinge and rivets on attached material tracking list.

4. Install Handle

- a. Install handle brackets.
- Set 84267-01 handle bracket on provisions in hoops, 2 places.
 - Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
 - Torque AN3 bolts to ??.
- b. Install handle
- Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
 - Grease two 36275-01 bushings with ?? Insert into bushings of handle assembly.
 - Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
 - On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
 - At first end, remove bolt and repeat step iv.
 - Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
 - Torque AN3 bolts to ??.
- c. Check handle
- Operate handle to ensure handle does not bind and springs hold handle in.
 - Snap handle into brackets to ensure handle locks.
- d. Record PO/WO of all parts used in steps above on attached material tracking list.



5. Install lid brace

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

6. Final Inspection

Dual inspection by a different person than assembled the basket.

- a. Check for general condition and correct assembly:
 - i. Bolts are tight
 - ii. Rivets are installed correctly
 - iii. Handle operates correctly
 - iv. Lid brace operates correctly
- b. Check that PO/WO numbers have been recorded.

jc

Work Order: 2015-58Date Opened: 01-Jun-15Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

1 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			94010-01	Cargo Basket Assembly		
Step 1				<i>Lid Assembly</i>		
	. 1		94012-01	Basket Lid Assembly		2015-51
Step 1.a.	. . 4		49205-14	Bumper	Argus Industries Bumper	
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	. . 1		94027-01	Placard	0.063 Sheet, 6061-T6 Aluminum	
	. . 4		CR3213-4-02	Cherry Rivet		15031
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	
	. . A/R		CR3213-4-02	Cherry Rivet		15031
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		94011-01	Basket Body Assembly		2015-50
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	
	. . 8		AN960-616	Washer		
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	95"	14091
	. 8		CR3523-5-02	Cherry Rivet		15031
	. A/R		CR3213-5-02	Cherry Rivet		15031
Step 4	. 1		84255-01	<i>Handle Installation</i>		
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	
	. . 4		AN3-11A	Bolt		
	. . 8		NAS1149F0363P	Washer		
	. . 4		MS21044N3	Nut		

Work Order: _____

Date Opened: _____

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

2 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly		
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	
	.. 2		AN3-12A	Bolt		
	.. 4		NAS1149F0363P	Washer		
	.. 2		MS21044N3	Nut		
Step 5				<i>Lid Brace Installation</i>		
	. 1		36280-01	Brace Assembly		
	. 1		AN3-15A	Bolt		
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				<i>Inspection</i>	<i>None</i>	

THE FOLLOWING CHANGES INFORMATION WAS SENT BACK TO YOUR MERCHANT TO ADD SECOND LTV. THE BRANCH, OR ANY FUTURE BRANCH, MAY NOT BE REFINANCED, UPLOADED, OR DISCLOSED IN ANY MANNER, FOR 180 DAYS FOR MANUFACTURING REPAIRS. THE MERCHANT CANNOT BE ADDED SECOND LTV. BY ACCEPTING CHARGEDOWN, THE MERCHANT AGREES TO HOLD THIS SECOND LTV VARIANCE FROM THE LTV, IN VALUE, OF THE CHARGING ON THE INFORMATION CONTAINED THEREIN.			
REV	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK, ADD ALTERNATE REVENUE, HARDWARE P/N'S UPDATED.	BJC	11/27/78
CHARGE BRACE ASSEMBLY TO INSTALLATION			









NOTE:
1. ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY. DIMENSIONS OF COMPONENT AND COMPLETE ASSEMBLY ARE DETERMINED IN PREVIOUS STEPS.

[illegible]

[01]		LIST OF MATERIALS	
BASIC CODE REF: 9403.02	DRAWING NO. FOR DIMENSION P-4200, 9403.02 NEW BUSHING P-4200, 9403.02 NEW BUSHING	APPROVALS S. R. HATHNELL C. SURGUCH	DATE 20 OCT 1971
CROSS-SECTIONAL DIMENSION DRAWING NO. FOR LENS P-4200, 9403.02 NEW BUSHING			
<p>UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES ON DECIMALS X .000 ±0.010 X .001 ±0.005 X .010 ±0.005 X .010 ±0.010</p>			
<p>EUROCORP AC3500 & AC355 SERIES BUCKLE RELEASE CATCHER BASKET ASSEMBLY (EXTRA LARGE)</p>			
<p>BASIC CODES: 9403-02040 9403-02043 9403-02044 9403-02045 9403-02046 9403-02047 9403-02048 9403-02049 9403-02050 9403-02051 9403-02052 9403-02053 9403-02054 9403-02055 9403-02056 9403-02057 9403-02058 9403-02059 9403-02060 9403-02061 9403-02062 9403-02063 9403-02064 9403-02065 9403-02066 9403-02067 9403-02068 9403-02069 9403-02070 9403-02071 9403-02072 9403-02073 9403-02074 9403-02075 9403-02076 9403-02077 9403-02078 9403-02079 9403-02080 9403-02081 9403-02082 9403-02083 9403-02084 9403-02085 9403-02086 9403-02087 9403-02088 9403-02089 9403-02090 9403-02091 9403-02092 9403-02093 9403-02094 9403-02095 9403-02096 9403-02097 9403-02098 9403-02099 9403-02100 9403-02101 9403-02102 9403-02103 9403-02104 9403-02105 9403-02106 9403-02107 9403-02108 9403-02109 9403-02110 9403-02111 9403-02112 9403-02113 9403-02114 9403-02115 9403-02116 9403-02117 9403-02118 9403-02119 9403-02120 9403-02121 9403-02122 9403-02123 9403-02124 9403-02125 9403-02126 9403-02127 9403-02128 9403-02129 9403-02130 9403-02131 9403-02132 9403-02133 9403-02134 9403-02135 9403-02136 9403-02137 9403-02138 9403-02139 9403-02140 9403-02141 9403-02142 9403-02143 9403-02144 9403-02145 9403-02146 9403-02147 9403-02148 9403-02149 9403-02150 9403-02151 9403-02152 9403-02153 9403-02154 9403-02155 9403-02156 9403-02157 9403-02158 9403-02159 9403-02160 9403-02161 9403-02162 9403-02163 9403-02164 9403-02165 9403-02166 9403-02167 9403-02168 9403-02169 9403-02170 9403-02171 9403-02172 9403-02173 9403-02174 9403-02175 9403-02176 9403-02177 9403-02178 9403-02179 9403-02180 9403-02181 9403-02182 9403-02183 9403-02184 9403-02185 9403-02186 9403-02187 9403-02188 9403-02189 9403-02190 9403-02191 9403-02192 9403-02193 9403-02194 9403-02195 9403-02196 9403-02197 9403-02198 9403-02199 9403-02200 9403-02201 9403-02202 9403-02203 9403-02204 9403-02205 9403-02206 9403-02207 9403-02208 9403-02209 9403-02210 9403-02211 9403-02212 9403-02213 9403-02214 9403-02215 9403-02216 9403-02217 9403-02218 9403-02219 9403-02220 9403-02221 9403-02222 9403-02223 9403-02224 9403-02225 9403-02226 9403-02227 9403-02228 9403-02229 9403-02230 9403-02231 9403-02232 9403-02233 9403-02234 9403-02235 9403-02236 9403-02237 9403-02238 9403-02239 9403-02240 9403-02241 9403-02242 9403-02243 9403-02244 9403-02245 9403-02246 9403-02247 9403-02248 9403-02249 9403-02250 9403-02251 9403-02252 9403-02253 9403-02254 9403-02255 9403-02256 9403-02257 9403-02258 9403-02259 9403-02260 9403-02261 9403-02262 9403-02263 9403-02264 9403-02265 9403-02266 9403-02267 9403-02268 9403-02269 9403-02270 9403-02271 9403-02272 9403-02273 9403-02274 9403-02275 9403-02276 9403-02277 9403-02278 9403-02279 9403-02280 9403-02281 9403-02282 9403-02283 9403-02284 9403-02285 9403-02286 9403-02287 9403-02288 9403-02289 9403-02290 9403-02291 9403-02292 9403-02293 9403-02294 9403-02295 9403-02296 9403-02297 9403-02298 9403-02299 9403-02300 9403-02301 9403-02302 9403-02303 9403-02304 9403-02305 9403-02306 9403-02307 9403-02308 9403-02309 9403-02310 9403-02311 9403-02312 9403-02313 9403-02314 9403-02315 9403-02316 9403-02317 9403-02318 9403-02319 9403-02320 9403-02321 9403-02322 9403-02323 9403-02324 9403-02325 9403-02326 9403-02327 9403-02328 9403-02329 9403-02330 9403-02331 9403-02332 9403-02333 9403-02334 9403-02335 9403-02336 9403-02337 9403-02338 9403-02339 9403-02340 9403-02341 9403-02342 9403-02343 9403-02344 9403-02345 9403-02346 9403-02347 9403-02348 9403-02349 9403-02350 9403-02351 9403-02352 9403-02353 9403-02354 9403-02355 9403-02356 9403-02357 9403-02358 9403-02359 9403-02360 9403-02361 9403-02362 9403-02363 9403-02364 9403-02365 9403-02366 9403-02367 9403-02368 9403-02369 9403-02370 9403-02371 9403-02372 9403-02373 9403-02374 9403-02375 9403-02376 9403-02377 9403-02378 9403-02379 9403-02380 9403-02381 9403-02382 9403-02383 9403-02384 9403-02385 9403-02386 9403-02387 9403-02388 9403-02389 9403-02390 9403-02391 9403-02392 9403-02393 9403-02394 9403-02395 9403-02396 9403-02397 9403-02398 9403-02399 9403-02400 9403-02401 9403-02402 9403-02403 9403-02404 9403-02405 9403-02406 9403-02407 9403-02408 9403-02409 9403-02410 9403-02411 9403-02412 9403-02413 9403-02414 9403-02415 9403-02416 9403-02417 9403-02418 9403-02419 9403-02420 9403-02421 9403-02422 9403-02423 9403-02424 9403-02425 9403-02426 9403-02427 9403-02428 9403-02429 9403-02430 9403-02431 9403-02432 9403-02433 9403-02434 9403-02435 9403-02436 9403-02437 9403-02438 9403-02439 9403-02440 9403-02441 9403-02442 9403-02443 9403-02444 9403-02445 9403-02446 9403-02447 9403-02448 9403-02449 9403-02450 9403-02451 9403-02452 9403-02453 9403-02454 9403-02455 9403-02456 9403-02457 9403-02458 9403-02459 9403-02460 9403-02461 9403-02462 9403-02463 9403-02464 9403-02465 9403-02466 9403-02467 9403-02468 9403-02469 9403-02470 9403-02471 9403-02472 9403-02473 9403-02474 9403-02475 9403-02476 9403-02477 9403-02478 9403-02479 9403-02480 9403-02481 9403-02482 9403-02483 9403-02484 9403-02485 9403-02486 9403-02487 9403-02488 9403-02489 9403-02490 9403-02491 9403-02492 9403-02493 9403-02494 9403-02495 9403-02496 9403-02497 9403-02498 9403-02499 9403-02500 9403-02501 9403-02502 9403-02503 9403-02504 9403-02505 9403-02506 9403-02507 9403-02508 9403-02509 9403-02510 9403-02511 9403-02512 9403-02513 9403-02514 9403-02515 9403-02516 9403-02517 9403-02518 9403-02519 9403-02520 9403-02521 9403-02522 9403-02523 9403-02524 9403-02525 9403-02526 9403-02527 9403-02528 9403-02529 9403-02530 9403-02531 9403-02532 9403-02533 9403-02534 9403-02535 9403-02536 9403-02537 9403-02538 9403-02539 9403-02540 9403-02541 9403-02542 9403-02543 9403-02544 9403-02545 9403-02546 9403-02547 9403-02548 9403-02549 9403-02550 9403-02551 9403-02552 9403-02553 9403-02554 9403-02555 9403-02556 9403-02557 9403-02558 9403-02559 9403-02560 9403-02561 9403-02562 9403-02563 9403-02564 9403-02565 9403-02566 9403-02567 9403-02568 9403-02569 9403-02570 9403-02571 9403-02572 9403-02573 9403-02574 9403-02575 9403-02576 9403-02577 9403-02578 9403-02579 9403-02580 9403-02581 9403-02582 9403-02583 9403-02584 9403-02585 9403-02586 9403-02587 9403-02588 9403-02589 9403-02590 9403-02591 9403-02592 9403-02593 9403-02594 9403-02595 9403-02596 9403-02597 9403-02598 9403-02599 9403-02600 9403-02601 9403-02602 9403-02603 9403-02604 9403-02605 9403-02606 9403-02607 9403-02608 9403-02609 9403-02610 9403-02611 9403-02612 9403-02613 9403-02614 9403-02615 9403-02616 9403-02617 9403-02618 9403-02619 9403-02620 9403-02621 9403-02622 9403-02623 9403-02624 9403-02625 9403-02626 9403-02627 9403-02628 9403-02629 9403-02630 9403-02631 9403-02632 9403-02633 9403-02634 9403-02635 9403-02636 9403-02637 9403-02638 9403-02639 9403-02640 9403-02641 9403-02642 9403-02643 9403-02644 9403-02645 9403-02646 9403-02647 9403-02648 9403-02649 9403-02650 9403-02651 9403-02652 9403-02653 9403-02654 9403-02655 9403-02656 9403-02657 9403-02658 9403-02659 9403-02660 9403-02661 9403-02662 9403-02663 9403-02664 9403-02665 9403-02666 9403-02667 9403-02668 9403-02669 9403-02670 9403-02671 9403-02672 9403-02673 9403-02674 9403-02675 9403-02676 9403-02677 9403-02678 9403-02679 9403-02680 9403-02681 9403-02682 9403-02683 9403-02684 9403-02685 9403-02686 9403-02687 9403-02688 9403-02689 9403-02690 9403-02691 9403-02692 9403-02693 9403-02694 9403-02695 9403-02696 9403-02697 9403-02698 9403-02699 9403-02700 9403-02701 9403-02702 9403-02703 9403-02704 9403-02705 9403-02706 9403-02707 9403-02708 9403-02709 9403-02710 9403-02711 9403-02712 9403-02713 9403-02714 9403-02715 9403-02716 9403-02717 9403-02718 9403-02719 9403-02720 9403-02721 9403-02722 9403-02723 9403-02724 9403-02725 9403-02726 9403-02727 9403-02728 9403-02729 9403-02730 9403-02731 9403-02732 9403-02733 9403-02734 9403-02735 9403-02736 9403-02737 9403-02738 9403-02739 9403-02740 9403-02741 9403-02742 9403-02743 9403-02744 9403-02745 9403-02746 9403-02747 9403-02748 9403-02749 9403-02750 9403-02751 9403-02752 9403-02753 9403-02754 9403-02755 9403-02756 9403-02757 9403-02758 9403-02759 9403-02760 9403-02761 9403-02762 9403-02763 9403-02764 9403-02765 9403-02766 9403-02767 9403-02768 9403-02769 9403-02770 9403-02771 9403-02772 9403-02773 9403-02774 9403-02775 9403-02776 9403-02777 9403-02778 9403-02779 9403-02780 9403-02781 9403-02782 9403-02783 9403-02784 9403-02785 9403-02786 9403-02787 9403-02788 9403-02789 9403-02790 9403-02791 9403-02792 9403-02793 9403-02794 9403-02795 9403-02796 9403-02797 9403-02798 9403-02799 9403-02800 9403-02801 9403-02802 9403-02803 9403-02804 9403-02805 9403-02806 9403-02807 9403-02808 9403-02809 9403-02810 9403-02811 9403-02812 9403-02813 9403-02814 9403-02815 9403-02816 9403-02817 9403-02818 9403-02819 9403-02820 9403-02821 9403-02822 9403-02823 9403-02824 9403-02825 9403-02826 9403-02827 9403-02828 9403-02829 9403-02830 9403-02831 9403-02832 9403-02833 9403-02834 9403-02835 9403-02836 9403-02837 9403-02838 9403-02839 9403-02840 9403-02841 9403-02842 9403-02843 9403-02844 9403-02845 9403-02846 9403-02847 9403-02848 9403-02849 9403-02850 9403-02851 9403-02852 9403-02853 9403-02854 9403-02855 9403-02856 9403-02857 9403-02858 9403-02859 9403-02860 9403-02861 9403-02862 9403-02863 9403-02864 9403-02865 9403-02866 9403-02867 9403-02868 9403-02869 9403-02870 9403-02871 9403-02872 9403-02873 9403-02874 9403-02875 9403-02876 9403-02877 9403-02878 9403-02879 9403-02880 9403-02881 9403-02882 9403-02883 9403-02884 9403-02885 9403-02886 9403-02887 9403-02888 9403-02889 9403-02890 9403-02891 9403-02892 9403-02893 9403-02894 9403-02895 9403-02896 9403-02897 9403-02898 9403-02899 9403-02900 9403-02901 9403-02902 9403-02903 9403-02904 9403-02905 9403-02906 9403-02907 9403-02908 9403-02909 9403-02910 9403-02911 9403-02912 9403-02913 9403-02914 9403-02915 9403-02916 9403-02917 9403-02918 9403-02919 9403-02920 9403-02921 9403-02922 9403-02923 9403-02924 9403-02925 9403-02926 9403-02927 9403-02928 9403-02929 9403-02930 9403-02931 9403-02932 9403-02933 9403-02934 9403-02935 9403-02936 9403-02937 9403-02938 9403-02939 9403-02940 9403-02941 9403-02942 9403-02943 9403-02944 9403-02945 9403-02946 9403-02947 9403-02948 9403-02949 9403-02950 9403-02951 9403-02952 9403-02953 9403-02954 9403-02955 9403-02956 9403-02957 9403-02958 9403-02959 9403-02960 9403-02961 9403-02962 9403-02963 9403-02964 9403-02965 9403-02966 9403-02967 9403-02968 9403-02969 9403-02970 9403-02971 9403-02972 9403-02973 9403-02974 9403-02975 9403-02976 9403-02977 9403-02978 9403-02979 9403-02980 9403-02981 9403-02982 9403-02983 9403-02984 9403-02985 9403-02986 9403-02987 9403-02988 9403-02989 9403-02990 9403-02991 9403-02992 9403-02993 9403-02994 9403-02995 9403-02996 9403-02997 9403-02998 9403-02999 9403-03000 9403-03001 9403-03002 9403-03003 9403-03004 9403-03005 9403-03006 9403-03007 9403-03008 9403-03009 9403-03010 9403-03011 9403-03012 9403-03013 9403-03014 9403-03015 9403-03016 9403-03017 9403-03018 9403-03019 9403-03020 9403-03021 9403-03022 9403-03023 9403-03024 9403-03025 9403-03026 9403-03027 9403-03028 9403-03029 9403-03030 9403-03031 9403-03032 9403-03033 9403-03034 9403-03035 9403-03036 9403-03037 </p>			

REVISION		DESCRIPTION OF CHANGE	INITIALS	DATE
1	REV	FILE BLOCK LINES		
2	REV	FILE BLOCK LINES		
3	REV	FILE BLOCK LINES		
4	REV	FILE BLOCK LINES		
5	REV	FILE BLOCK LINES		
6	REV	FILE BLOCK LINES		
7	REV	FILE BLOCK LINES		
8	REV	FILE BLOCK LINES		
9	REV	FILE BLOCK LINES		
10	REV	FILE BLOCK LINES		

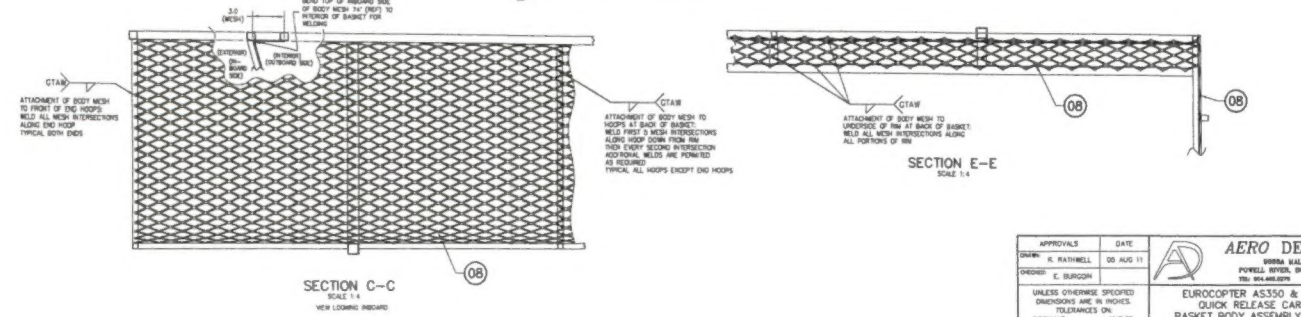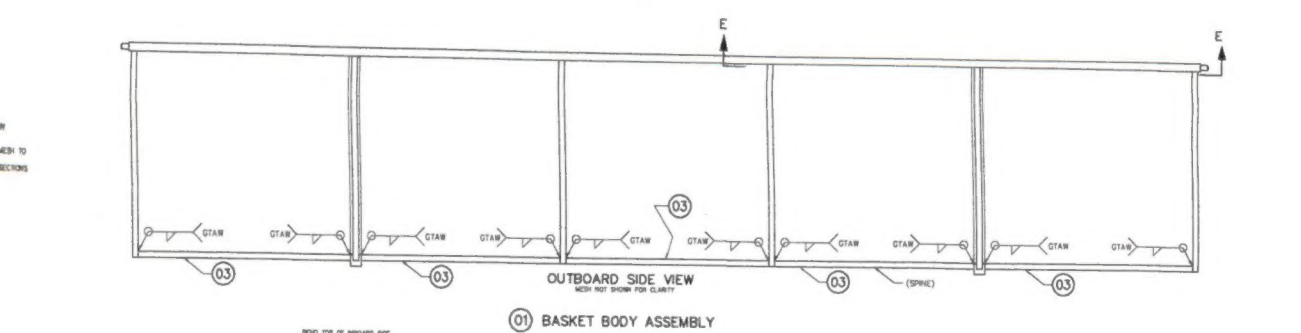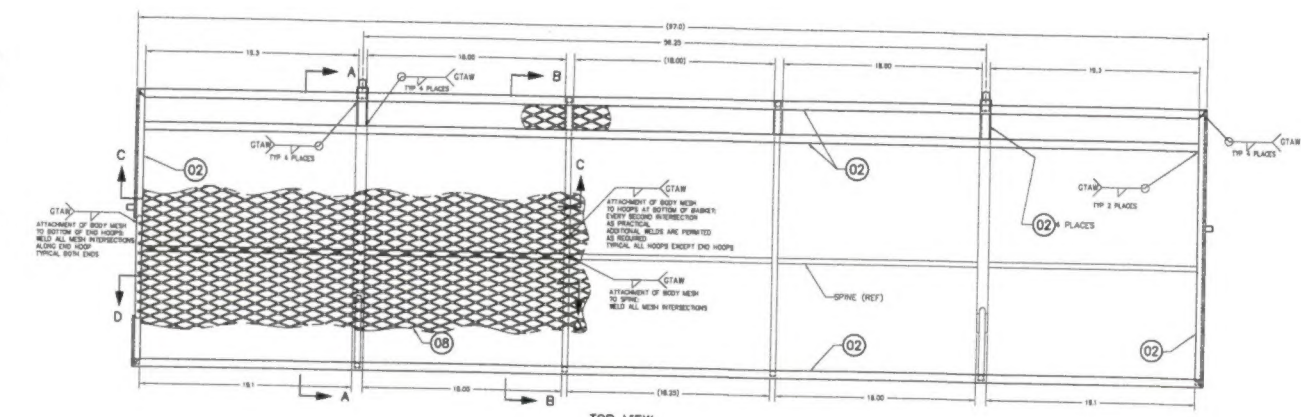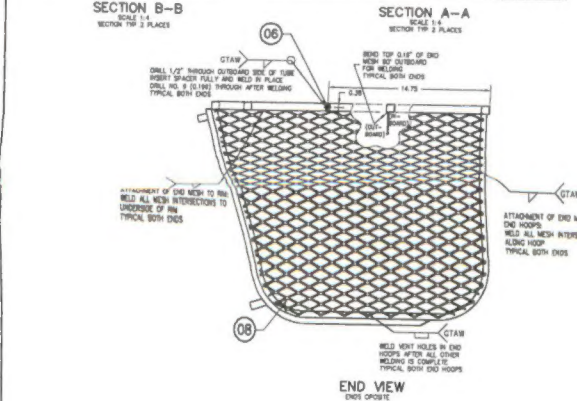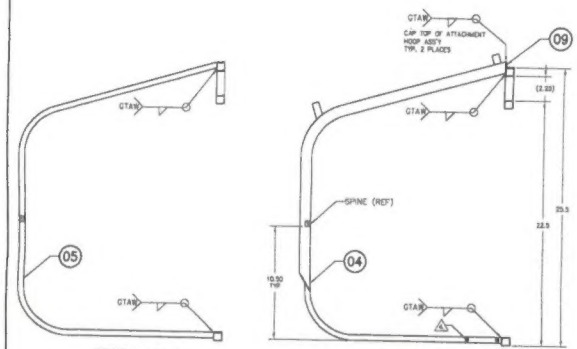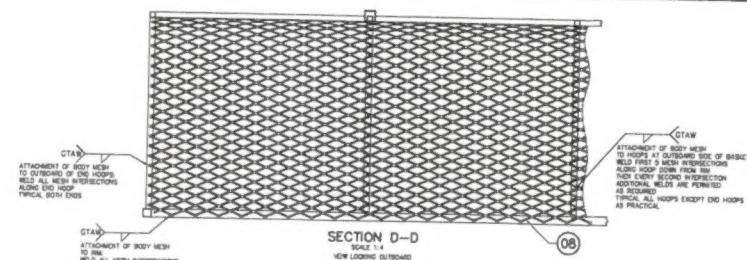

- NOTES:
1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
 2. PRIOR TO WELDING, DRILL .002 (0.125) VENT HOLES IN ASSEMBLY FOR VENTING OF MELT GASES. WHEN ASSEMBLY IS COMPLETE, FILL ALL EXPOSED VENT HOLES WITH ROSETTE WELD.
 3. WELDING OF 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AHS 2000C.
 4. 4130 AND 1018 STEEL WELDING ROD SHALL CONFORM TO SPECS-1 OR EQUIVALENT.
 5. STAINLESS AND 4130 STEEL WELDING ROD SHALL CONFORM TO SPECS-1 OR EQUIVALENT.
 6. INSTALL ITEM 7 (BASKET HANDLE PROVISIONS ASSEMBLY) IN ACCORDANCE WITH AERO DESIGN LTD. DRAWING 94910 BEFORE WELDING HOOPS TO RING.
 7. FINISH: THOROUGHLY CLEAN AND POWDER COAT BASKET ASSEMBLY.

PART NO.	QTY	DESCRIPTION	MATERIAL	NOTE	STOCK SIZE
1	1	4130 STEEL WELDING ROD	4130 STEEL		
2	1	4130 STEEL WELDING ROD	4130 STEEL		
3	1	4130 STEEL WELDING ROD	4130 STEEL		
4	1	4130 STEEL WELDING ROD	4130 STEEL		
5	1	4130 STEEL WELDING ROD	4130 STEEL		
6	1	4130 STEEL WELDING ROD	4130 STEEL		
7	1	4130 STEEL WELDING ROD	4130 STEEL		
8	1	4130 STEEL WELDING ROD	4130 STEEL		
9	1	4130 STEEL WELDING ROD	4130 STEEL		
10	1	4130 STEEL WELDING ROD	4130 STEEL		


APPROVALS	DATE	SCALE	SIZE	QTY
DESIGNED BY: R. BATHWELL	08 AUG 11	1:4	A0	1
CHECKED BY: S. BATHWELL				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DIMENSIONS ARE IN INCHES				
DECIMALS	ANGLES			
XXX ±0.010	±1/2°			
XX ±0.03				
X ±0.1				

AERO DESIGN LTD.
 8000 KALAMAZOO ROAD
 PORTER, MICHIGAN 48864, U.S.A.
 TEL: 519.465.8070
 WWW.AERODESIGN.CO

EUROCOPTER AS350 & AS355 SERIES
QUICK RELEASE CARGO BASKET
BASKET BODY ASSEMBLY (EXTRA LARGE)

SCALE 1:4
 SHEET 1 OF 1


THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THE DRAWING OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE PURCHASER AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR ABUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.			
REV	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	TITLE BLOCK UPDATED; CHANGED 36273-01 TO 84283-01; ITEM #'S ADDED	BJC	16/07/2014
	WELDING ROD UPDATED; # OF WELDS DOWN BRACE TUBES INCREASED		

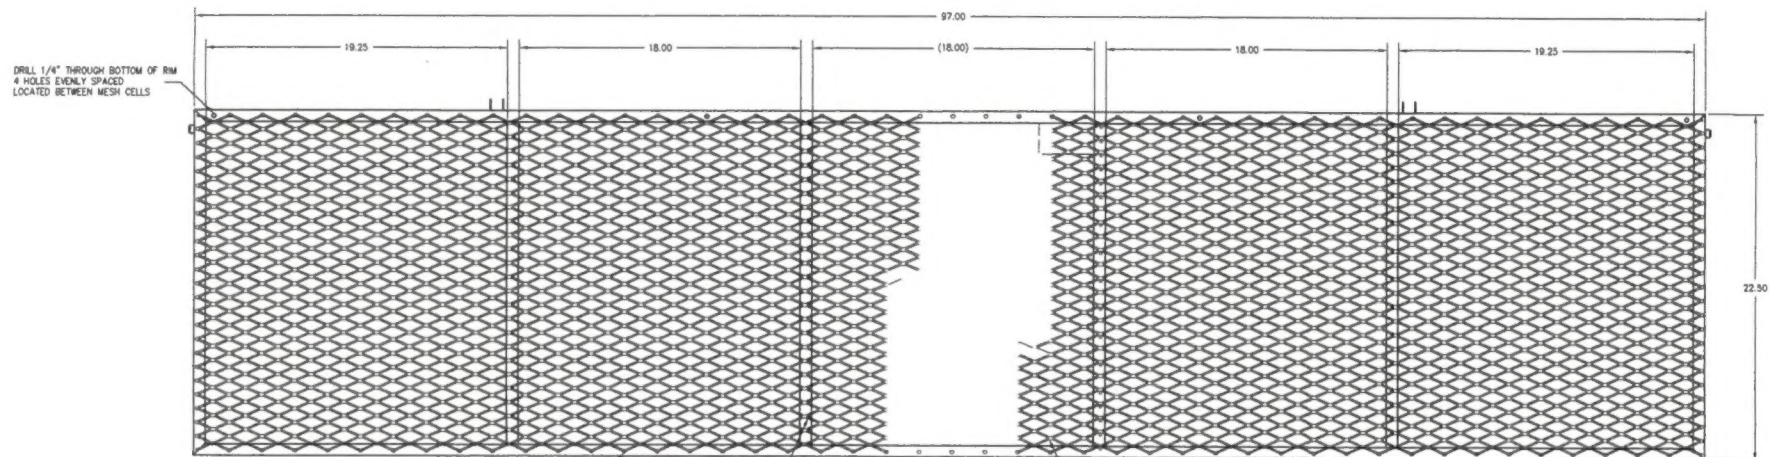

GTAW TYP
ATTACHMENT OF MESH TO RIM:
WELD EACH INTERSECTION


GTAW TYP
ATTACHMENT OF MESH TO CROSS MEMBERS:
WELD FIRST FIVE INTERSECTIONS
THEN EVERY SECOND INTERSECTION
ADDITIONAL WELDS ARE PERMITTED AS REQUIRED

BOTTOM VIEW (03) MESH

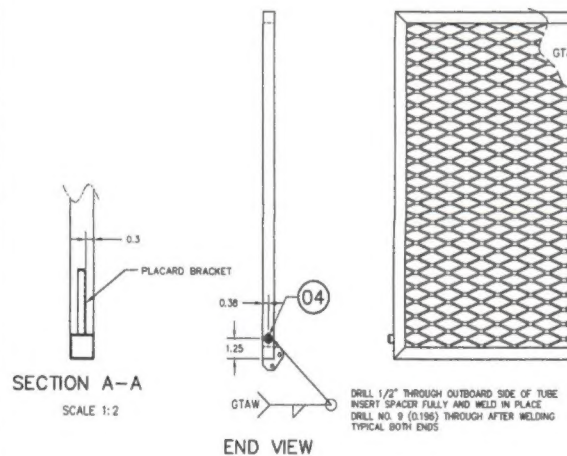

SECTION A-A
SCALE 1:2

END VIEW

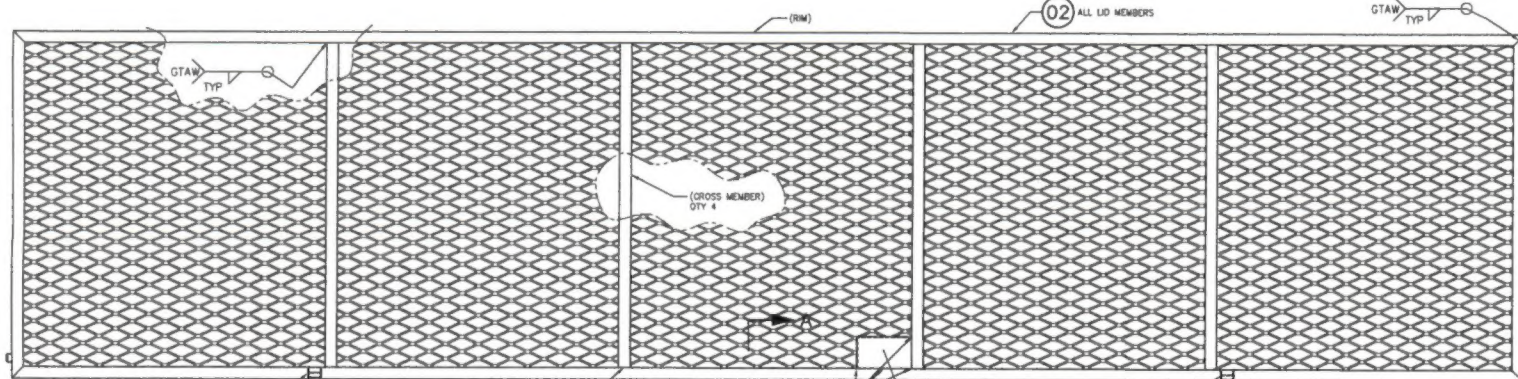

TOP VIEW

(01) LID ASSEMBLY

- NOTES:
1. REMOVE ALL BURRS AND BREAK SHARP EDGES.
 2. WELDING OF 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AWS 2845C.
 - 4130 AND 1018 STEEL: WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT.
 - STAINLESS AND 4130 STEEL: WELDING ROD SHALL CONFORM TO ER308L OR EQUIVALENT.
 - INSTALL ITEM 5 (LID HANDLE PROVISIONS ASSEMBLY) IN ACCORDANCE WITH AERO DESIGN LTD. DRAWING 84263.
 - DRILL #30 (0.129) HOLES IN LONG TUBE MEMBERS AT BRACE LOCATIONS TO VENT WELD GASSES.
 - WHEN ASSEMBLY IS COMPLETE, FILL ALL EXPOSED VENT HOLES WITH ROSETTE WELD.
 5. FINISH: THOROUGHLY CLEAN AND POWDER COAT LID ASSEMBLY.

PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
1	36204-10	06 PLACARD BRACKET			
1	84263-01	05 LID HANDLE PROVISIONS ASSEMBLY			
2	49216-01	04 SPACER			
A/R	3/4 - 16F	03 MESH	MILD STEEL	COMMERCIAL	
A/R		02 SQUARE TUBE	4130 STEEL COND. H	MIL-T-8736	0.75 X 0.035 SQR TUBE
	94012-01	01 LID ASSEMBLY			
LIST OF MATERIALS					
QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC

APPROVALS		DATE		
DRAWN: R. RATHWELL		05 AUG 11		
CHECKED: E. BURCOIN				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON:				
DECIMALS			ANGLES	
X.XXX ±0.010			±1/2°	
X.XX ±0.03				
X.X ±0.1				
SCALE 1 : 4			DWG. SIZE	DWG. NO.
SHEET 1 OF 1			A1	94012
			REV	1

AERO DESIGN LTD.
8888A MALASPINA ROAD,
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.485.5376 www.aerodesign.ca

**EUROCOPTER AS350 & AS355 SERIES
QUICK RELEASE CARGO BASKET
LID ASSEMBLY (EXTRA LARGE)**

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; UPDATE ADDRESS AND LOGO; MAT'L THICKNESS CHANGED	BJC	10/07/2014

NOTES

- ENGRAVE 0.007 DEEP AS FOLLOWS:
"QUICK RELEASE BASKET" - 0.125 HIGH
"EUROCOPTER AS350 & AS355 SERIES" - 0.080 HIGH
"S/N 94001-XX" - 0.080 HIGH
"MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
"300 LBS/136 KG" - 0.200 HIGH
"AERO DESIGN LTD." - 0.125 HIGH
"POWELL RIVER, BC, CANADA" - 0.080 HIGH
"www.aerodesign.ca" - 0.080 HIGH


DRILL #30 (0.129)
4 PLACES



01 PLACARD

94027-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.050 SHEET
PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE

LIST OF MATERIALS

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.	APPROVALS		DATE		 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 804.483.2376 www.aerodesign.ca	
	DRAWN: R. RATHWELL		OCT 3, 2011			
	CHECKED: E. BURGAIN					
	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2" X.XX ±0.03 X.X ±0.1				EUROCOPTER AS350 & AS355 SERIES QUICK RELEASE CARGO BASKET PLACARD	
	SCALE 1 : 1		DWG. SIZE A4	DWG. NO. 94027	REV. 1	SHEET 1 OF 1

Aero Design

Parts Distribution Sheet

Description: Basket Assembly Kit

WO# 2015-58

[illegible]